



**1°** Adjust the height with the Cable holder as shown in the FIG. 01.

**2°** Fix the support on the ceiling using the fixing kit (screws and Bushings) contained on the package.

**3°** Install the electrical network.

**4°** Push canopy against support until hear a click sound

**\*To replace the lamp, you will need remove the Block Ring. If have difficulty, use an screwdriver as indicated on the figure above.**

<b>ML-2170</b>	2700K	250lm	Ø1 1/2" x 6"	120V
<b>ML-2171</b>	2700K	250lm	Ø1 1/2" x 11 5/8"	120V
<b>ML-2172</b>	2700K	250lm	Ø1 1/2" x 23 1/2"	120V

<b>Power:</b> 3W	<b>Weight:</b> 1.24 lbs
<b>Power:</b> 3W	<b>Weight:</b> 1.34 lbs
<b>Power:</b> 3W	<b>Weight:</b> 2.66 lbs

**Product indicated for indoor areas.**

### Attention

Follow the instructions to ensure proper and safe operation. We recommend that the installation be done by a qualified professional. Recessed ceiling installation requires rigid support point attachment and special installations require special attachment.

### Important

Lamps, transformers, and reactors are not included with the product except as noted. Failure to follow the instructions in the manual could result in accidents and loss of warranty. Do not adjust springs and brackets unless otherwise indicated.  
 Warranty: 1 year for product and 5 years for Led and Driver.

### Cleaning and Maintenance

Before any action turn off the electric current. Clean only with water dampened flannel, never use chemicals or abrasives. The materials that make up the product are non-toxic.